Stacking frame installation for RLS W12

Equipment:

- Bracket Kit – R9864221
- Stacking frame – R9899700
- BME RLS W12 - R9005944

Tools:

- Philips screwdriver
- 5mm Allen Key

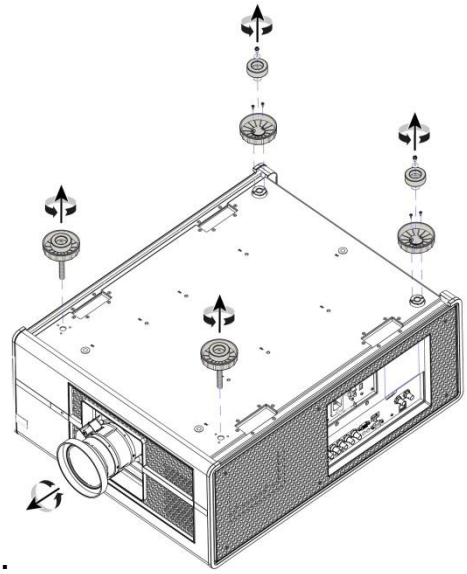

1.
Remove projection lens and 4 feet
Front feet can be removed as 1 part.
Rear feet need to be disassembled with screws.

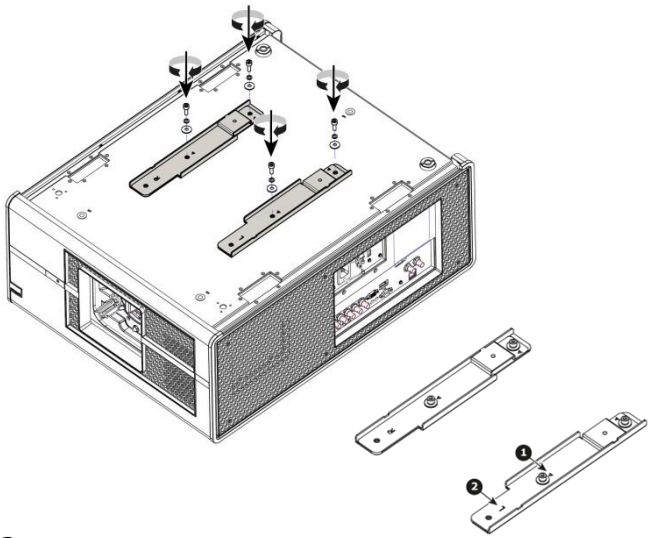

2.
Install 2 base brackets with 4 internal hex bolts, 4 spring washers and 4 large washers.
Note the direction of the arrow (1) and position of the bracket (2).

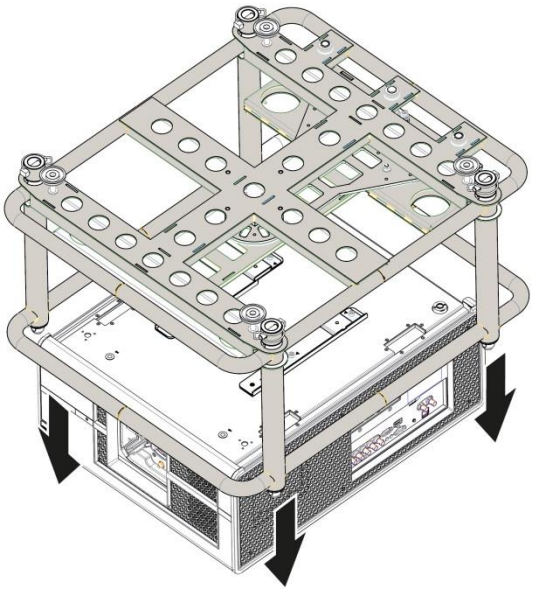

3.
Lower the frame carefully over the projector

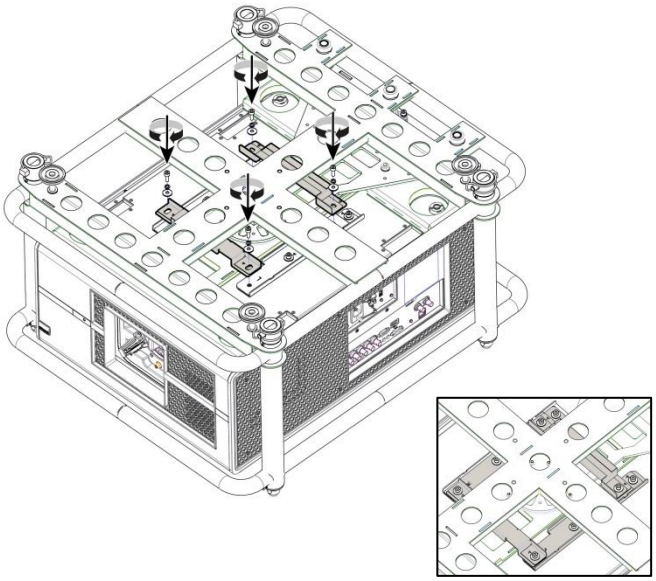

4.
Install 2 fixation brackets with 4 internal hex bolts, 4 spring washers and 4 large washers.
Again, note the direction of the arrows

Barco nv
Noordlaan 5,
B-8520 Kuurne, Belgium

BARCO
Visibly yours